



# Bose® SoundLink®

Mini Bluetooth® Speaker

#### Please read this guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy its advanced features. Please save this guide for future reference.





The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.



#### WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- The battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.
- · Do not dismantle, open or shred battery pack.
- Do not short-circuit the battery or battery pack. Do not store the battery pack haphazardly in a box or drawer where it may short-circuit by other metal objects.
- · Do not subject battery pack to mechanical shock.
- In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

©2013 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without written permission.



#### WARNINGS

- Do not use any charger other than that specifically provided for use with the equipment.
- Do not use any battery pack which is not designed for use with the equipment.
- · Keep battery pack out of the reach of children.
- Replace the battery pack only with a genuine replacement battery pack from Bose or an authorized Bose dealer. Bose cannot warrant the safety and compatibility or assure the operability of batteries from other manufacturers for use in operating this product. Keep battery pack clean and dry.
- The battery needs to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- The battery pack gives its best performance when it is operated at normal room temperature (20°C +/- 5°C).
- Use only the battery in the application for which it was intended.



**WARNING**: This product contains magnets which can be harmful to pacemaker wearers.



**CAUTION**: Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.



 Please dispose of used batteries properly, following any local regulations.
 Do not incinerate.

#### NOTES:

- The product label is located on the inside of the battery cover on the bottom of the product.
- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The power supply provided with this product must be used indoors.
  It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided, or Bose® power supply or charger designed for use with this product.

#### Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### Information about products that generate electrical noise

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be colocated or operating in conjunction with any other antennas or transmitters.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### U.S.A. only

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

#### Canada

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Output power: 4 mW @ 2400 MHz



 This product conforms to all applicable EU directive requirements. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

Per EN300220-1 this product contains a category 3 receiver.

Names and Contents of Toxic or Hazardous Substances or Elements						
	Toxic	or Hazardo	ous Substan	ces and Elem	ents	
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybromi- nated Biphenyl (PBB)	Polybromi- nated Diphenyl Ether (PBDE)
PCBs	Х	0	0	0	0	0
Metal parts	Х	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Speakers	Х	0	0	0	0	0
Cables	Х	0	0	0	0	0

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.

Please complete and retain for your record	Please	complete	and	retain	for	vour	record
--	--------	----------	-----	--------	-----	------	--------

The serial number is located on the rubber foot at the bottom of the speaker. The model number is located on the inside surface of the rubber foot (pull the rubber foot away from the speaker to read the model number).

Serial number (on bottom of speaker)

Model number (inside rubber base of speaker)

Purchase date \_\_\_\_\_

We suggest you keep your receipt with this owner's guide.

### Contents

Introduction	
Overview	8
Unpacking	8
Setup	
Connecting to AC power	10
Connect to AC power via the	
charging cradle	10
Connect to AC power via the speaker	12
Pairing a device to the speaker	13
Operation	
Connecting a paired device	15
Speaker memory	15
Clearing memory	15
Control buttons	16
System status indicators	17

Using the AUX connector	18
Operating on battery power	20
Checking the battery	20
Battery protection mode	20
Charging the battery	20
Tips on placing the speaker	2
Maintenance and Care	
Troubleshooting	23
Replacing the battery	28
Cleaning	28
Contacting customer service	28
Limited warranty	29
Technical information	20
	_

#### Introduction

#### Overview

Thank you for purchasing the Bose® SoundLink® Mini Bluetooth® speaker. Enjoy music wirelessly from your smartphone, tablet, laptop, or other Bluetooth® device anywhere you choose.

#### **Features**

- Wireless Bluetooth link eliminates the need to physically connect your Bluetooth capable audio source.
- Rechargeable lithium-ion battery provides hours of Bose® performance.
- AUX connector lets you connect your Bluetooth device or other music source device directly to your speaker.
- Pair up to six Bluetooth devices.
- Easy grab-and-go mobility.

### Unpacking

Check the carton for the Bose® SoundLink® Mini speaker, power supply, and charging cradle. Be sure to save all of the packing materials. These provide the safest means for any necessary shipping or transporting.

If any part of the product appears to be damaged, do not attempt to use it. Contact your authorized Bose dealer immediately or call Bose Customer Service. For contact information, refer to the contact list at the end of this guide.

### Introduction



Soundlink® Bluetooth® Mini speaker



AC power supply



Charging Cradle



Adapters

### Setup

### **Connecting to AC power**

Before using your Bose® SoundLink® Mini speaker the first time, connect it to AC (mains) power and charge the battery. You can connect the power supply cord into the charging cradle, or directly into the speaker. While the battery is charging, you can begin using the speaker.

## Connect to AC power via the charging cradle

The charging cradle provides a home base for your Bose® SoundLink® Mini speaker. You can connect to AC power through the charging cradle and, with the speaker placed on the charging cradle, charge the battery.

- 1. Extend the power supply prongs.
- If needed, snap on the adapter for your region (2a). To remove an adapter, press back on the release and lift the adapter up and off (2b).

